

PiiGAB 820 - Quickstart guide

Setup your PiiGAB 820 with dynamic IP (DHCP)

- 1) Connect a Windows computer to the same network as your PiiGAB 820, and then turn on the power to your PiiGAB 820.
- 2) Wait 10 seconds, open a web browser and enter:
piigab-YourDevicesSerialNumber.local (E.g. "piigab-30101989.local")
Admin password: The password is printed on the device's left side.

Setup your PiiGAB 820 with static IP

- 1) Connect a network cable between a Windows computer and your PiiGAB 820, and then turn on the power to your PiiGAB 820.
(Ensure that your computer is set to obtain an IP address automatically.)
- 2) Wait 3 minutes, open a web browser and enter
piigab-YourDevicesSerialNumber.local (E.g. "piigab-30101989.local")
Admin password: The password is printed on the device's left side.
- 3) Go to Settings. Under "Network settings" choose "Static" and enter the IP adress you receive from the organization's IT department.

Explanation of LED indication

LED	Blink pattern	Indicator	Meaning
PWR	● (Solid green)	Power on	Device in operation
	● (Off)	No power	Check power supply
	● (Solid blue)	Startup	Device is starting up
	● (Flashing red)	Error status	Short circuit
	● (Slow flashing red)	Error status	Overload
RX	● (Flashing green)	Incoming traffic	Data received
TX	● (Flashing green)	Outgoing traffic	Data transmitted

For help, scan
the QR-code:



Do you have more questions or need help?
support@piigab.se 031-55 99 77

PiiGAB